To configure a nexMatrix SIP:

Configure your trunk as displayed in the Diagram below. Make the appropriate modifications to Call limit based upon the number of trunks you purchased. And the number of simultaneous calls you purchased.

SIP Provider	
Name:	nexMatrix
User Type:	friend 💌
DTMF Mode:	auto 💌
Host:	sip10.nexmatrix.net
Port:	Default Custom
Register:	● Yes O No O Custom register => 11512-IN:MQf>
Authentication:	○ Yes ⊙ No ○ Custom
Auth User:	Default Custom
From User:	Default Custom
From Domain:	Default Custom
Realm:	Default Custom
Outbound Proxy:	Disabled
Username:	11512-IN
Secret:	MQfXGwjraTUHntJm9Zxl8:
Inbound Caller ID:	
Outbound Caller ID Name:	
Outbound Caller ID Number:	
Call Limit:	1
Qualify:	30000

Continued:



SMARTER BUSINESS COMMUNICATIONS support@ipitomy.com

941.306.2200

Default Destination:	Menus	Menu: miketest	
Dial Prefix:			
Area Code:			
Generate Ringing on outbound calls:			
Allow Outbound Caller to transfer:			
Allow Call Recording:			
Ext CID Override:			
Restrict CID Override:			
Can Reinvite:	O Yes No O N/A		
Insecure:	Very 💌		
Allow Codecs:	ITU G.711 ulaw 64Kbps, (US)		V
	ITU G.711 alaw 64Kbps		V
	ITU G.723.1 (5.3/6.3 Kbps, 30	lms frame size	
	ITU G.726 - 16/24/32/40 Kbps		✓
	GSM - 13 Kbps (full rate), 20r	ns frame size	
	iLBC - 15Kbps,20ms frame si	ze: 13.3 Kbps, 30ms frame	
	size		
	Speex - 2.15 to 44.2 Kbps		
	LPC10 - 2.5 Kbps		
	G.729 - 8Kbps		