

To configure a Unlimited SIP:

Configure your trunk as displayed in the Diagram below. Make the appropriate modifications to Call limit based upon the number of trunks you purchased. And the number of simultaneous calls you purchased.

SIP Provider	
Name:	<input type="text" value="unlimitel"/>
User Type:	<input type="text" value="peer"/>
DTMF Mode:	<input type="text" value="rfc2833"/>
Host:	<input type="text" value="sip05.unlimitel.ca"/>
Register:	<input type="radio"/> Yes <input type="radio"/> No <input checked="" type="radio"/> Custom <input type="text" value="register => 6133695131:1"/>
Authorization:	<input type="radio"/> Yes <input type="radio"/> No <input checked="" type="radio"/> Custom <input type="text" value="auth = 6133695131:14251"/>
From Domain:	<input checked="" type="radio"/> Default <input type="radio"/> Custom <input type="text"/>
Outbound Proxy:	<input checked="" type="radio"/> Disabled <input type="radio"/> Enabled <input type="text"/>
Username:	<input type="text" value="6133695131"/>
Secret:	<input type="text" value="1425147"/>
Inbound Caller ID:	<input type="text"/>
Outbound Caller ID Name:	<input type="text" value="OnePoint Communication"/>
Outbound Caller ID Number:	<input type="text" value="6132480596"/>
Call Limit:	<input type="text" value="5"/>
Qualify:	<input type="text" value="30000"/>
Default Destination:	<input type="text" value="Extensions"/> <input type="text" value="Extension: 201"/> ...
Dial Prefix:	<input type="text"/>
Area Code:	<input type="text"/>
Generate Ringing on outbound calls:	<input type="checkbox"/>
Allow Outbound Caller to transfer:	<input type="checkbox"/>
Allow Call Recording:	<input type="checkbox"/>
Ext CID Override:	<input type="checkbox"/>
Restrict CID Override:	<input type="checkbox"/>
Can Reinvite:	<input type="radio"/> Yes <input checked="" type="radio"/> No <input type="radio"/> N/A
Insecure:	<input type="text" value="Very"/>

